SAVE AND DISPLAY PROMINENTLY WHERE THIS EQUIPMENT IS USED

WARNING

HIGH PRESSURE AND HOT LIQUID SPRAYS CAN CAUSE SERIOUS BODILY INJURY.

NEVER

- Never allow children or unauthorised personnel to handle equipment.
- Never put your hand or fingers in front of gun.
- Never point gun at your body or anyone else.
- Never leave gun unattended without releasing pressure and engaging trigger lock.
- Never use mechanical means to hold trigger in open position.

BEFORE spraying and during spraying

ALWAYS

- Before pulling trigger hold gun firmly in <u>both</u> hands.
- Adopt a proper body stance to anticipate high recoil force by spray gun.
- Exercise care and caution when spraying.
- Stop spraying before becoming fatigued.
- When spraying hot liquids avoid hand or body contact with non-insulated parts of extension and inlet body of the gun.

BEFORE

removing spray tip or nozzle – OR – attempting service or maintenance

ALWAYS*

- 1. Shut off supplies.
- 2. Discharge contents of gun to eliminate pressure.
- Note: Also follow 1 and 2 when discontinuing spraying operation
- Follow the manufacturer's recommendations for maximum pressures, periodic cleaning, maintenance and parts replacement procedures.
- Do not operate the equipment if there are any leaks from spray gun, fittings, or hoses.
 High pressure leaks can penetrate the skin causing serious injury.

STAY SAFE!

